





Instruction functional/non-functional CC Halfcontainer posts

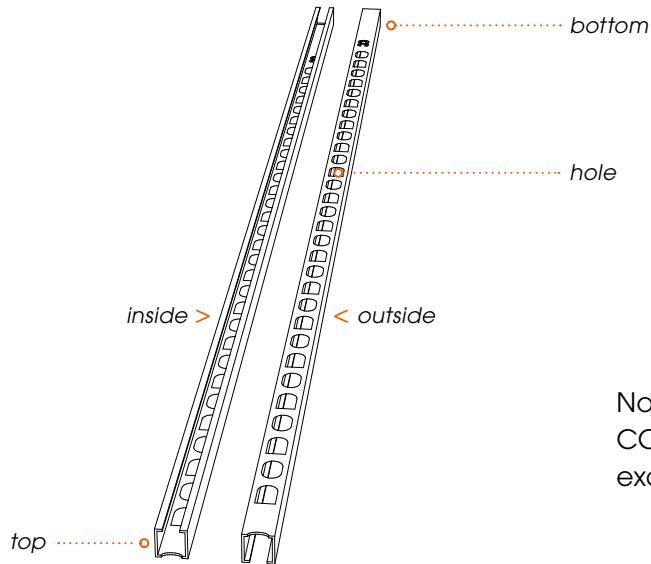


Non-functional posts can be handed in at a CC depot or at a partner depot for repair and exchanged for a functional posts.

When is a post non-functional?

01 Posts are twisted and shelves cannot be mounted.

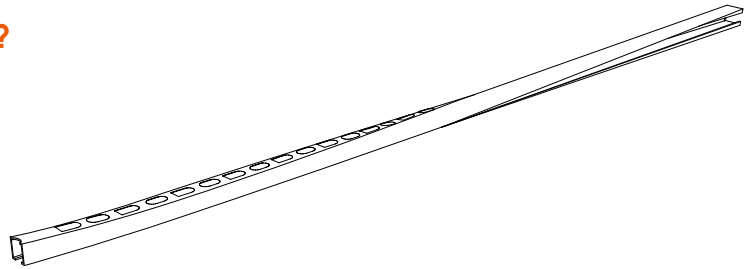

02 Posts are bent and shelves cannot be mounted.

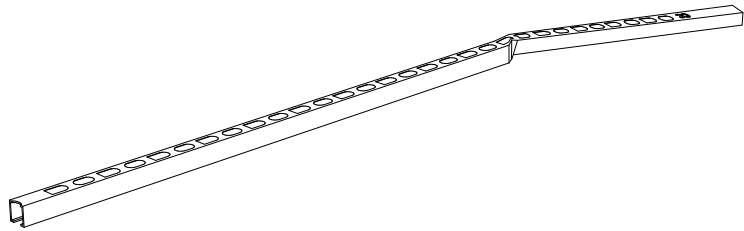

When is a post not accepted for exchange?

Posts cannot be handed in at a CC depot or partner depot for repair and exchanged for a functional post when:

- The post is functional.
- The length of the post is <180 cm or there are <30 holes.
- The thickness of the steel of the posts is <2.55 mm.
- Posts have holes on more sides.